Muskoka®

Cavan

Electric Fireplace

with traditional design that complements any decor

Foyer Électrique

avec la conception traditionel qui complète n'importe quel décor

Chimenea Eléctrica

con el diseño tradicional que complementa cualquier decoración

IN HOME WARRANTY
GARANTIE À LA MAISON
GARANTÍA EN SU PROPIA CASA
1 YEAR AN AÑO

SAVE THESE INSTRUCTIONS
CONSERVER CES INSTRUCTIONS
GUARDE ESTAS INSTRUCCIONES

REV08-05

MEF2367BWLG

Assembly Instructions
Instructions d'assemblage
Instrucciones de montaje

Muskoka

TIPS FOR THE ASSEMBLY OF YOUR NEW MANTEL

Before you begin assembly, locate the instructions and hardware. Take out all the parts and compare them to the diagrams below. Be sure you have all the parts and can identify them.

CARE AND MAINTENANCE

1. Dust your fireplace mantel regularly with a soft non-lint producing cloth or household dusting product.
2. You can clean your fireplace insert with a gentle non-abrasive household cleaner. Make sure to dry your fireplace immediately with a soft cloth or towel.

A helping hand is always good. Assemble your mantel with an adult assistant if possible. Some pieces are heavy and will need to be held by a helper. Assembly time will take approximately 30-60 minutes.

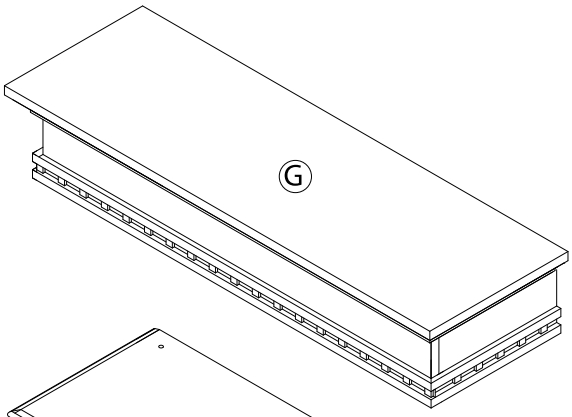

TOP 1 PC
ZZ.2367BWLG.01

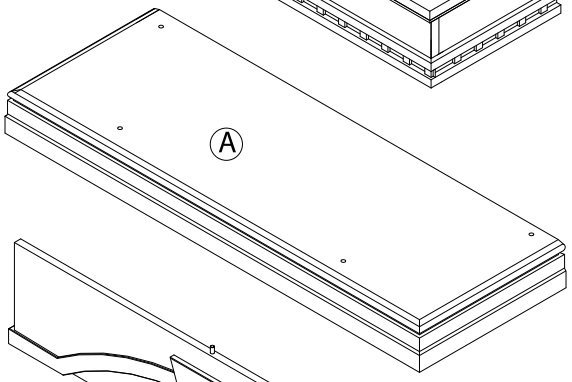

BASE 1 PC
ZZ.2367BWLG.02

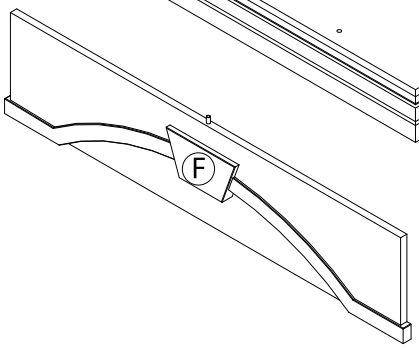

CENTRAL HEADER 1 PC
ZZ.2367BWLG.03



LEFT FRONT PANEL 1 PC
ZZ.2367BWLG.04



RGHT FRONT PANEL 1 PC
ZZ.2367BWLG.05

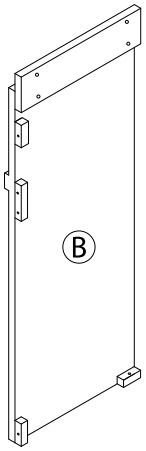

LEFT SIDE PANEL 1 PC
ZZ.2367BWLG.06

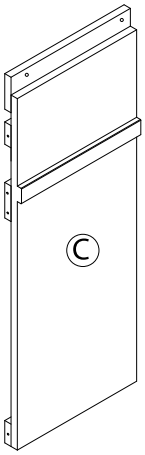

RGHT SIDE PANEL 1 PC
ZZ.2367BWLG.07

AA	GG	BB	CC	DD	EE	FF	
							
16 PCS	16 PCS	2 PCS	2 PCS	15mm 2 PCS	30mm 2 PCS	1 PC	1 PC
WINGNUT & LOCK WASHER			ANTI-TIP DEVICE				TOUCH UP PAINT

GET READY TO START

Before assembly, use scissors to unwrap the parts from the packaging. DO NOT use a box cutter or exacto-knife as you may cut into the mantel pieces inside the box and damage the finish. Check for the hardware bag which is RED and located inside the packaging, taped to the top box. Be sure you DO NOT discard any pieces. Use an appropriate screwdriver to insert and tighten all screws.

Step 1

Locate base A and place it on the floor. Do not put it up against the wall at this point in the assembly as you need to get in behind the mantel during assembly.

Step 1

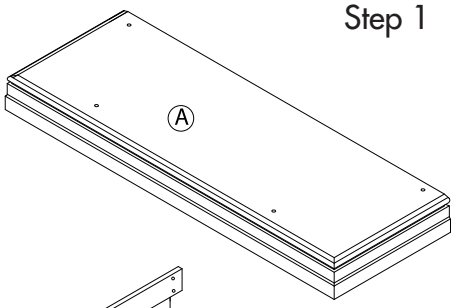

Step 2

Locate left and right side panels B and C. Take left side panel B and line up the hole in the block on left side panel B with the hole in base A. Once lined up insert and tighten 1 wing nut AA through lock washer GG. Do not over tighten and strip wing nut AA. Repeat for right side panel C.

Step 2

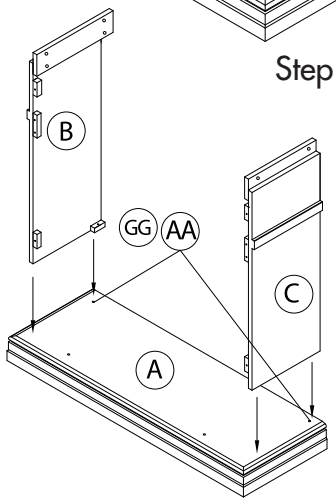

Hardware Used

AA	Wingnut	x 2
GG	Lock Washer	x 2

Step 3

Locate left and right front panels D and E. Take left front panel D and line up the hole in the block on left front panel D with the hole in base A. Once lined up insert and tighten 1 wing nut AA through lock washer GG. Do not over tighten and strip wing nut AA. Line up the 2 holes in the 2 blocks on left side panel B with the 2 holes in left front panel D. Once lined up insert and tighten 2 wing nuts AA through 2 lock washers GG. Do not over tighten and strip wing nuts AA. Repeat for right front panel E.

Step 3

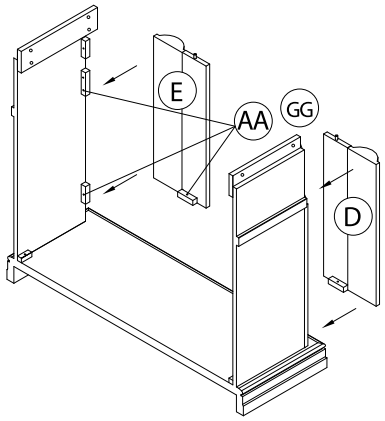

Hardware Used

AA	Wingnut	x 6
GG	Lock Washer	x 6

Step 4

Locate central header F. Line up the 2 holes on the bottom central header F with the wood dowels on each of the left and right front panels (D and E). Press down until flush. Line up the 4 holes in central header F with the 4 holes in the already built assembly (2 on each of the left and right side panels B and C). Once lined up insert and tighten 4 wing nuts AA through 4 lock washers GG. Do not over tighten and strip the wing nuts AA.

Step 4

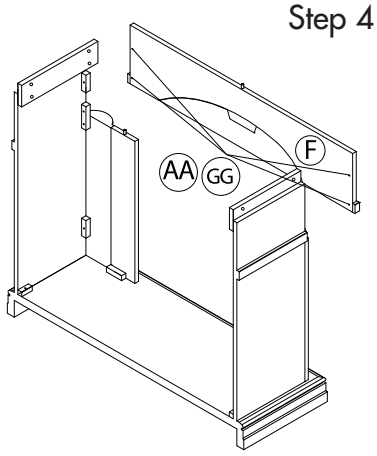

Hardware Used

AA Wingnut x 4

GG Lock Washer x 4

Step 5

Get your assistant and locate the top of your mantel. This top is very heavy. It will take 2 people to lift and position the top into place. Place top G onto the mantel assembly already built with the front and sides over the assembly. Make sure the wood dowel on the top of central header F lines up with the hole in top G. Press down until flush. From underneath, line up 4 holes in the mantel top with 4 holes in the mantel assembly (2 each in the left and right side panels B and C). Once lined up insert and tighten 4 wing nuts AA through 4 lock washers GG. Do not over tighten and strip the wing nuts AA.

Step 5

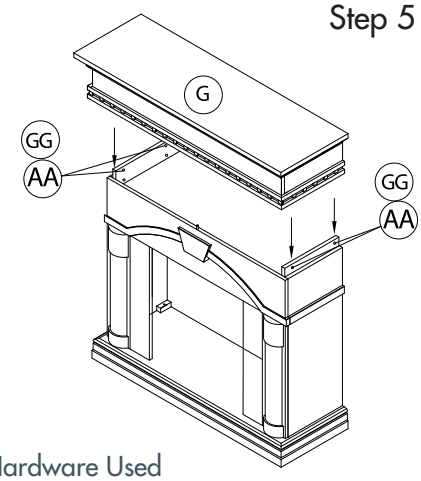

Hardware Used

AA Wingnut x 4

GG Lock Washer x 4

Step 6

Take your electric firebox out of its packaging and position it between the 2 legs of the mantel. Once you are close to the wall, plug the firebox into the nearest outlet.

The firebox comes with 3 metal brackets and 10 black screws. These metal brackets must be attached to all 3 sides of the firebox and 2 sides of the mantel to ensure that your firebox does not move around as you use it. All 3 trims attach to the firebox by inserting and tightening 2 screws. Both the left and right side trim attach to the mantel front by inserting and tightening 2 screws

The top trim does not attach to the mantel, just the firebox. If you have any questions about the firebox please reference the installation instructions that come with the firebox.

Step 6

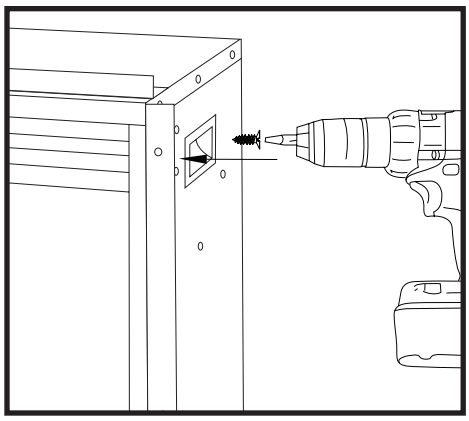

Step 7

Anti-tipping device (instructions included with hardware)

1. Attach one of the mounting brackets (CC) securely to the back edge of the furniture. Use the shorter screws (DD).
2. Determine where furniture is to be placed and mark location on the wall for the other mounting bracket (CC) screw holes. You may need to use 2 wall plugs (BB) if you are attaching to drywall or plaster.
3. Position the bracket over the holes and use the longer screws (EE) to securely attach the bracket to wall.
4. Place the furniture so the bracket (CC) on the back edge is in line with the bracket (CC) on the wall.
5. Place an end of the nylon restraint strap (FF) down through each bracket (CC). Bring both ends together and slide the end of the strap through the slot in the other end until snug. Pull down on the end until it snap locks into the slot.
6. Check to make sure the strap (FF) is securely laced and locked to the brackets (CC).

Young children may be injured by tipping furniture. The use of a tipping restraint is highly recommended. This hardware, when properly installed, could provide protection against the unexpected tipping of furniture due to improper use.

WARNING: This product is only a deterrent. It is not a substitute for proper adult supervision.

One anti-tip device includes the following:

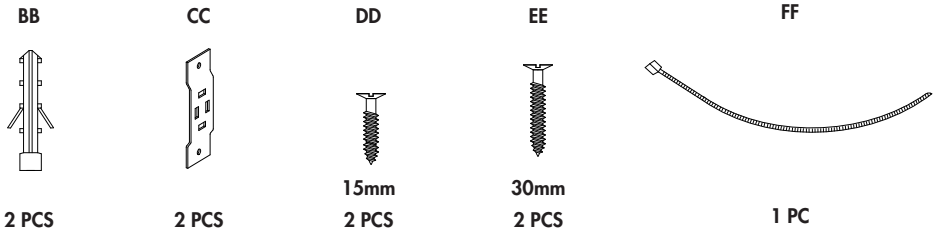

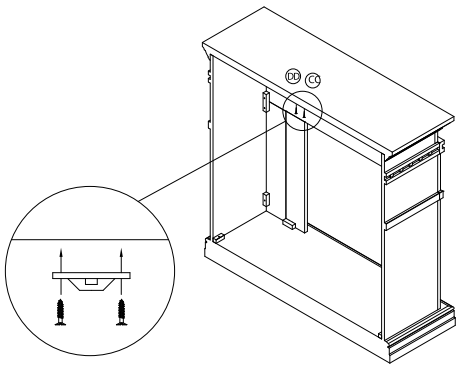

Hardware Used

DD	5/8″ Screw	x 2
EE	1-3/8″ Screw	x 2
CC	Mounting Bracket	x 2
BB	Anchor	x 2

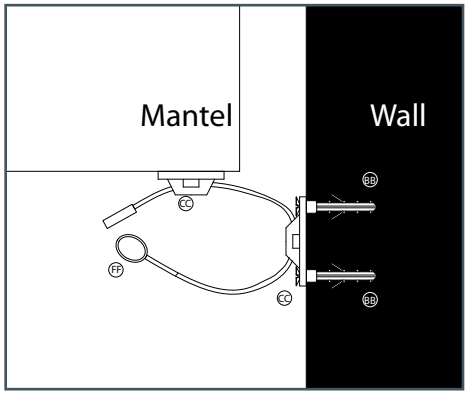

Hardware Used

FF	Nylon Strap	x 1

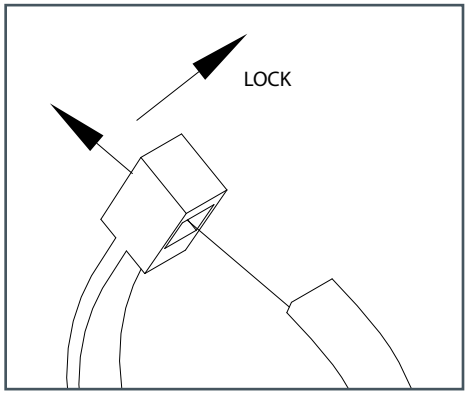

WARRANTY

Greenway Home Products is pleased to offer in-home warranty repairs. Please refer to your Firebox Use and Care Guide for warranty information on your Firebox.

DO NOT RETURN THIS PRODUCT TO THE STORE:
Please contact Customer Service at: **1-866-253-0447**
Monday to Thursday from 8:30AM to 5:00PM (EST), Friday from 8:30AM to 4:00PM (EST)
Web: **www.greenwayhp.com**
Email: **support@greenwayhp.com**

Canada: 400 Southgate Dr., Guelph, Ontario, Canada, N1G 4P5
USA: 1270 Flagship Dr., Perrysburg, Ohio, USA, 43551

Limited Warranty Definitions:
Greenway Home Products:

(Greenway)	Manufacturer.
Mantel:	Mantel manufactured by Greenway Home Products.
Purchaser:	Purchaser of the Mantel
Distributor:	Facility authorized to sell Greenway Home Products.
Warranty Card	Greenway Home Products Limited Warranty Registration Card identifying the Purchaser and product model.

Greenway Limited Warranty:
Greenway warrants to the Purchaser that the Mantel is free from defects in material and workmanship, under normal use and service, for 1 year (1 year limited parts) from the date of purchase.

All warranty repairs must be preauthorized by Greenway Home Products. Greenway will, at its' option, replace or repair free of charge any defective part, which the Purchaser shall notify their Distributor or Greenway Home Products within the warranty period. The obligation of Greenway Home Products under this warranty, is expressly limited to such replacement or repairs.

The provisions of this limited warranty shall not apply to the following:

1. Accidents.
2. Unauthorized repairs or alterations.
3. Normal maintenance.
4. Changes made to other units manufactured after this mantel was manufactured.
5. Incidental damages caused by failure of the mantel such as inconvenience or loss of use.
6. Improper installation.

The provisions of this limited warranty shall not apply to deterioration due to wear and exposure beyond the following limitations:

1. For 180 days from the date of purchase for exterior finished surfaces.

Due to the properties of natural wood, Greenway Home Products makes no warranty against mineraling of wood components.

Greenway Limited Warranty is void unless the following conditions are adhered to:

1. Warranty registration must be completed and returned to a Greenway Home Products.
2. All warranty repairs must be preauthorized by a Greenway repair facility.
3. Greenway reserves the right to inspect defective parts that have been replaced under warranty. Dealer is expected to hold defective parts for 60 days.
4. Only parts and accessories and other material, available through Greenway Home Products are to be used in the performance of warranty service.
5. Purchasers are responsible for presenting/notifying their Distributor as soon a problem exists. The warranty repairs should be completed in a reasonable amount of time from the date of authorization. Not to exceed 30 days past notification.

This limited warranty is expressly in lieu of any other expressed or implied warranty, including any implied warranty or merchantability or fitness for a particular purpose and of any obligations or liabilities on Greenway Home Products which neither assumes nor authorizes any other person to assume for it any other liability in connection with the Mantel manufactured by it.

The warranty is null and void if used in commercial or industrial applications.

Greenway® Home Products